

TABLE OF CONTENTS

◆ INTRODUCTION	4	◆ Locking a message	15
◆ FEATURES	5	◆ OPTIONAL FUNCTIONS	18
◆ GETTING STARTED	6	◆ Activating menu board	18
◆ Description of control button	6	◆ Setting alarm	20
◆ Description of icons	7	◆ Setting auto timer	21
◆ Turning your pager on and off	8	◆ Setting reminder alert	22
◆ Setting date & time	9	◆ Entering greeting	23
◆ Choosing different alert modes ..	10	◆ Ready messages	24
◆ MESSAGES	12	◆ Setting low battery alert	26
◆ Reading messages	12	◆ Setting script language	27
◆ Duplicate messages	13	◆ BATTERY INFORMATION	28
◆ Display	13	◆ Low battery indication	28
◆ Erasing a message	14	◆ Replacing battery	28
◆ Erasing all messages	14		

INTRODUCTION

Welcome to Nixxo Pager World!

 
Your new pager provides you with many enhanced features, such as 20 kinds of ready messages, 3 alarms, and English & French menu script. Nine segment display makes easy to read messages.

This user guide gives instructions on how to use "Titanium" pager.

 
FEATURES




 


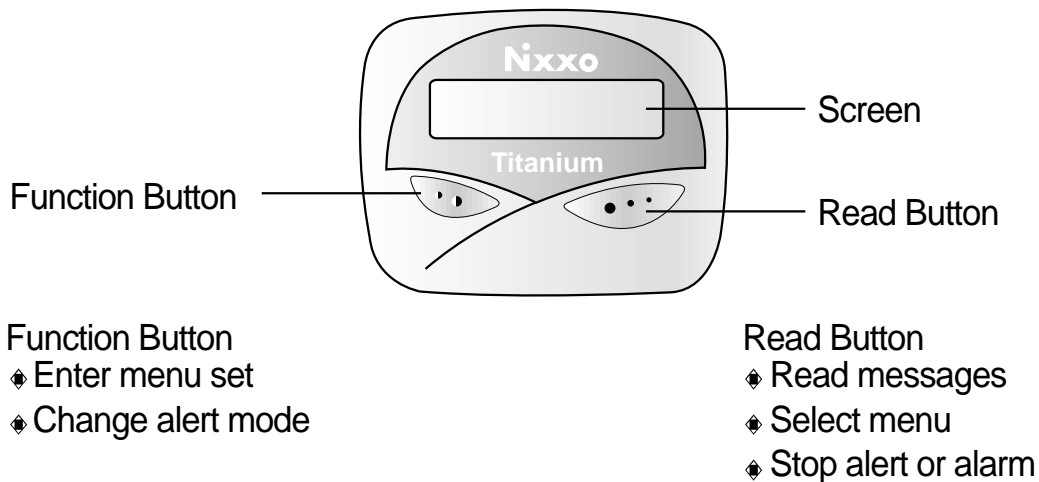

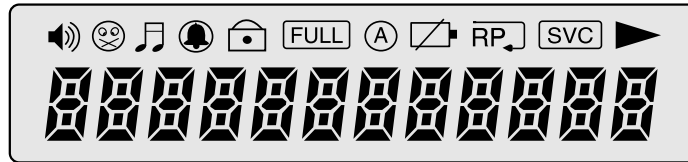


- ◆ FLEX Protocol
- ◆ 520 Characters Private Message Memory (20 Slots x 26 Characters)
- ◆ 20 Ready Messages (User Option On/Off)
- ◆ AGC (Auto Gain Control) Function Available
- ◆ Side View 1 Line Display (9 Segment)
- ◆ Menu Display Available in English & French
- ◆ Battery Backup When Replacing Battery
- ◆ Date & Time Display
- ◆ Receiving Time Stamping
- ◆ Message Lock
- ◆ Memory Full Indication
- ◆ Message Error Indication
- ◆ Individual Delete & Delete All
- ◆ 1 Daily & 2 Event Alarms
- ◆ User Selectable 15 Melodies & 5 Tones
- ◆ Vibration Alert
- ◆ User Programmable Auto On/Off Timer
- ◆ Reflective Backlighting Display
- ◆ User Programmable Unread Message Alert
- ◆ User Programmable Low Battery Alert
- ◆ Duplicate Message Indication
- ◆ User Programmable Headline
- ◆ 1 AAA Battery

1. DESCRIPTION OF CONTROL BUTTON






2. DESCRIPTION OF ICONS



- | | | | |
|---|----------------------|---|------------------------|
|  | Tone Alert |  | Auto On/Off Timer |
|  | Vibration Alert |  | Low Battery |
|  | Melody Alert |  | Duplicate Message |
|  | Pager Alarm |  | Service Area Indicator |
|  | Locked Message |  | Continued Message |
|  | Full Memory Capacity | | |


3. TURNING YOUR PAGER ON AND OFF

◆ TURN OFF

To turn your pager off, press  two times. When "Tone off" is displayed, press  to scan menu until "Power off" is displayed. Press  to turn off.



◆ TURN ON







Press  for 2 seconds to turn your pager on. Greeting message is displayed.



 
◆ BACKLIGHT

Press  to activate lamp. Backlight remains on for 4 seconds before automatically turned off.

4. SETTING DATE AND TIME

- ◆ Press . Backlight comes on. Then press  again. "Tone Off?" is displayed.
- ◆ Press  repeatedly until "SET TIME" is displayed.
- ◆ Press  to select menu. The month indicator begins to blink.
- ◆ Press  to move to the desired number.
Press  to enter correct month. The date indicator starts blinking.
- ◆ Repeat above steps to set all fields.





NOTE) Please adjust the date in Feb. of ordinary year because the pager will go to Feb.29 regardless of leap year.

 


5. CHOOSING DIFFERENT ALERT MODES

You can choose one of 3 types of alert modes : beep, vibration or musical alert.



1. VIBRATION ALERT







- ◆ Press  to change the sound alert to vibration alert. Backlight comes on.
- ◆ Press  again. "Tone Off" is displayed.
- ◆ Press  to confirm. The standby screen displays .



2. SOUND ALERT






Titanium has 15 melodies and 5 tones.

- ◆ To choose sound alert, press . Backlight comes on.
- ◆ Press  again. "Tone on" or "Tone off" is displayed.

- ◆ Press  to display "Melody Set."
- ◆ Press  to confirm. To scan sound, press . The screen shows the number for each sound.
- ◆ From 1 to 15 are melody alerts and from 16 to 20 are beep alerts. When the screen displays an alert you want, press  to confirm.
- ◆ The standby screen shows  or , depending on your choice.

 
 


1. READING MESSAGES


- ◆ When a message is received, Titanium either audibly alerts (beep or musical alert) or vibrates and display the message. To stop vibration or audible alert, press any button.
- ◆ If Titanium has any unread message, the screen displays "PAGE". To see the current time, press . The current time is will be displayed 3 seconds later.
- ◆ Press  to display the message. The screen displays the time the message was received.
- ◆ Press  again to display the message.
- ◆ If the message is continued to next page,  is displayed. Press  again to read the continued message.



01] the slot number
A : message address.




2. DUPLICATE MESSAGES

- ◆ If pager receives a duplicate message, duplicate icon  displays on top of the screen.







3. DISPLAY

- ◆ If the pager has 20 messages, “PAGE FULL” is displayed. If Titanium receives more than 20 messages, the oldest message gets deleted as new message is received.
- ◆ When the pager has no message, the screen displays “No Page” upon pressing of .
- ◆ When an error occurs receiving a message, “E” is displayed on the screen. “E ” means error message.






4. ERASING A MESSAGE

- ◆ After reading a message, press . Backlight comes on.
- ◆ Press  again. You are prompted with “ERASE?” display.
- ◆ Press  to confirm. If you want to exit this mode, press .



5. ERASING ALL MESSAGES

“ERASE ALL” command erases all messages except the locked messages.







- ◆ Press . Backlight comes on.
- ◆ Press and hold  for 2 seconds.
The screen automatically changes to “ERASE ALL”
- ◆ Press  to erase all messages.



6. LOCKING A MESSAGE







You can protect messages from being erased by “ERASE ALL” function.

SET MESSAGE LOCK FUNCTION

- ◆ Press  . Backlight comes on.
 - ◆ Press and hold  for 2 seconds.
 - ◆ The screen changes to “ERASE ALL”.
-
- ◆ Press  to display “SET LOCK FNC”.Then press .
 - ◆ Press  to turn the message lock “ON”.
 - ◆ Press  to confirm.






LOCK A MESSAGE

- ◆ Press  repeatedly to display the message to be locked.
- ◆ Press . Backlight comes on.
- ◆ Press  again. The screen shows “ERASE?”.
- ◆ Press . The screen displays “LOCK?”.
- ◆ Press . The message is now locked. When you read a locked message, you can see icon  on top of the screen.



UNLOCK A MESSAGE

- ◆ Press  repeatedly to select the message to be unlocked.





- ◆ Press  . Backlight comes on.
- ◆ Press  again. "Unlock ?" is displayed.
- ◆ Press  to confirm.



1. ACTIVATING MENU BOARDS

Titanium has 2 menu boards.

FIRST MENU BOARD

- ◆ To activate a menu board, press . Backlight comes on.
- ◆ Press  again. "Tone off" or "Tone on" is displayed.
- ◆ As  is pressed, the following menu shown on the down is displayed one after another.
- ◆ When the desired menu is displayed, press .



 
1. SET ALERT



2. SET MELODY



3. SET ALARM



4. SET TIME







5. POWER OFF



6. SET AUTO TIMER

SECOND MENU BOARD

- ◆ To activate the second menu board, press  . Backlight comes on.
- ◆ Press and hold  for 2 seconds. At first the screen displays “Tone off” or “Tone on”, but it changes to ‘ERASE ALL”, which is the first option of the second menu board.
- ◆ As  is pressed, the following menu is displayed one after another.
- ◆ When the desired menu is displayed, press  .



1. ERASE ALL

2. SET LOCK



3. SET REMINDER ALERT

4. ENTER GREETING

5. READY MESSAGE









6. LOW BATTERY ALERT





7. SET LANGUAGE

 
2. SETTING ALARM

Titanium has 2 types of alarms : daily alarm (everyday : alarm1)
special alarm (one time : alarm 2, 3)

- ◆ From standby mode, press  two times to activate menu.
- ◆ Press and release  until "SET ALARM" displays.
- ◆ Press  to activate alarm menu.
- ◆ Choose "alarm 1" for daily alarm and choose "alarm 2" or "3" for special alarm by pressing .
- ◆ When the desired alarm displays, press .
- ◆ Select "On" by pressing .



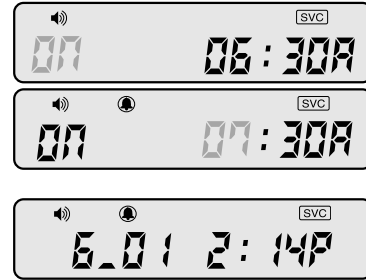

- ◆ Press  to confirm.
- ◆ Press  to enter the hour to the desired hour. Then press  to confirm.
- ◆ Repeat the above procedures to set each field.
- ◆ The standby screen displays icon .







3. SETTING AUTO TIMER

You can set your pager to power on or off automatically at a selected time of day. You can save battery power by using this function.

- ◆ From standby mode, press  two times to access the first menu board. (Refer to page 18.)
- ◆ Press and release  until "SET AUTO" is displayed.







- ◆ Press .
- ◆ Press  to select 'On'. Then press  to confirm.
- ◆ Follow the same procedures of time setting to set the on and off times. (Refer to page 9.)
- ◆ The standby screen displays icon .



4. SETTING REMINDER ALERT

You can set your pager to alert every 5 minutes in case you have unread messages.





- ◆ Activate the second menu board. (Refer to page 19.)

- ◆ Press and release  until "Unread FNC" is displayed. Then press .
- ◆ Press  to select "On". Then press  to confirm.



5. ENTERING GREETING

You can enter greeting messages upto 12 characters including space. The greeting is shown on the initial screen when power is on.

- ◆ Activate the second menu board. (Refer to page 19.)
- ◆ Press and release  until "SET GREETING" is displayed. Then press .
- ◆ Press  to select the first character, then press  to confirm.



- ◆ Repeat the above steps until you have entered the entire message.


NOTE) When entering characters, A ~ Z are followed by space () which is followed by 0 ~9 , space () and dash(-).

6. READY MESSAGES




Twenty ready messages are permanently stored in the memory of Titanium pager. When the pager receives a code number instead of phone number, it activates ready messages.

To send ready message, the person, paging you, enters *# and then a code number of ready message. For example, entering code *# 020 displays "Call home" on the screen. See the available codes on the next page.

To receive ready messages on your pager, do the following:

- ◆ Access the second menu board. (See page 19.)
- ◆ Press and release  until "Ready Msg" is displayed.



- ◆ Press  to set
- ◆ Press  to select “ready on”.
- ◆ Press  to confirm.









CODES FOR READY MESSAGES

CODES	MESSAGES	CODES	MESSAGES	CODES	MESSAGES
*# 020	Call home	*# 027	Pick you up	*# 034	Appt. time
*# 021	Call office	*# 028	Home urgt	*# 035	I am sorry
*# 022	Come home	*# 029	I am home	*# 036	Go to store
*# 023	Come office	*# 030	I love you	*# 037	Thanks
*# 024	Spvisor urgt	*# 031	I miss you	*# 038	Hurry
*# 025	Pick up kids	*# 032	Good night	*# 039	Running late
*# 026	Pick me up	*# 033	Help		

7. SETTING LOW BATTERY ALERT







You can set your pager to low battery alert using this function, when the battery is low.

- ◆ From standby mode, press .
- ◆ Press and hold  for 2 seconds to activate the second menu board. (Refer to page 19.)
- ◆ Press and release  until “LOW BAT_Fnc” is displayed.
- ◆ Press .
- ◆ Press  to select ‘On’.
- ◆ Press  to confirm.




8. SETTING SCRIPT LANGUAGE

Your pager provides you with two menu script languages to choose from; English and French.

- ◆ From standby mode, press .
- ◆ Press and hold  for 2 seconds to access the second menu board. (Refer to page 19.)
- ◆ Press and release  until "SET LANGUAGE" is displayed.
- ◆ Press .
- ◆ Press  to select language.
- ◆ When the desired language is displayed, press .



1. LOW BATTERY INDICAITON

Titanium displays icon  when battery is low.
If the pager is set on low battery alert, it sounds a beep alert.



2. REPLACING BATTERY

Titanium is designed to operate with a single AAA-size alkaline battery.

- ◆ Slide the battery cover in the direction of the arrow (a).
- ◆ Lift the battery cover away from rear cover.
- ◆ Remove old battery.
- ◆ Insert a new battery taking note of the positive (+) and negative (-) marks on the battery.

